

OneKEY

LED light colour indicators

Battery indicator lights

(When key is out of charger)

- **Green** If LED is green when button is pressed, the battery is good (continue use)
- **Orange (Flash)** If LED is flashing orange, the battery is low (return to charger soon)
- **Red** If LED is red when button is pressed, the battery is too low for use (return to charger immediately)

Activation lights

(When key is out of charger and button is pressed)

- **Green** More than 1 hour of activation time remaining (continue use)
- **Orange** 1 hour of less of activation time remaining (return to charger soon)
- **Red** Deactivated (return to charger immediately)

Power lights

(When key is out of charger and button is pressed)

- **Blue** Activated and can provide power
- **Red** Not activated or battery too low for wireless devices. Check other LED's for activation time or battery charge level
- **Purple (Flash)** Unlocked cabinet reminder or error "buzz"

