

SABEL

Installation Instructions

ADH2300

Parts



DESCRIPTION
Polish Packet




DESCRIPTION
Microfiber Cloth


Application



1 Open the polish packet.

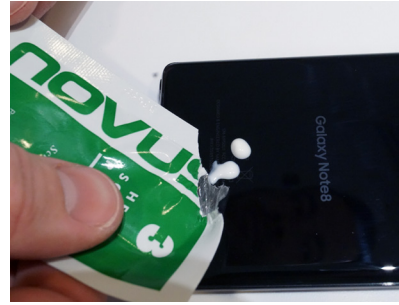

2 Squeeze a small amount of polishing compound onto the back of the device where the sensor will be placed.

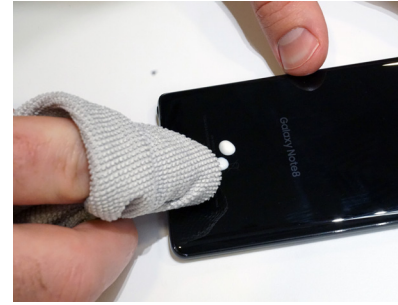

3 Use the microfiber cloth to firmly rub the polishing compound onto the device for 15-20 seconds.



4 Use the microfiber cloth to firmly buff the back of the device.

Note: A visual difference may not be apparent.

5 The device is now ready to have an LSE plate or other adhesive applied to the surface.

Note: Repeat the process for any additional devices.